

Product overview

Front, rear, inside view, product description

Lenovo


Lenovo ThinkSystem SR650 server product overview

The Lenovo ThinkSystem SR650 (MT 7X05 and MT 7X06) server is a 2U rack server designed for high-volume network transaction processing. This high-performance, multicore server is ideally suited for networking environments that require superior microprocessor performance, I/O flexibility, and high manageability.

Front view of server models with eight 2.5-inch front drives

Components on the front of server models with 2.5-inch drives.

1. Pull-out information tab
2. Front I/O assembly
3. Rack latch (right)
4. Drive bays
5. Rack latch (left)
6. VGA connector
7. Drive activity LED
(available on some models)
8. Drive status LED
9. Drive bay filler


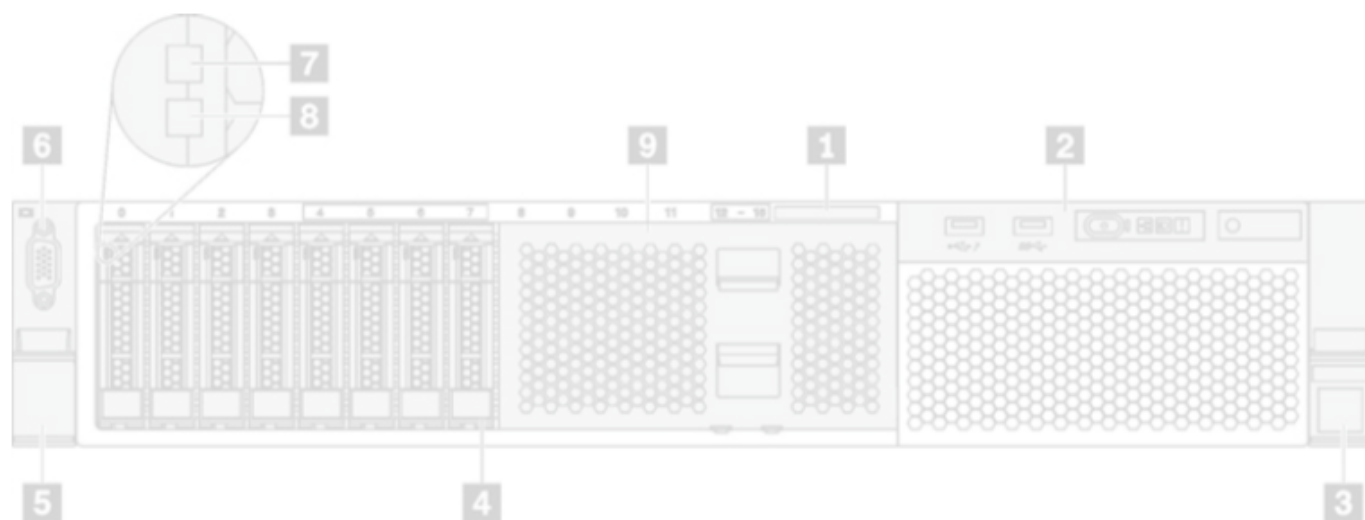


Front view of server models with 16 and 24 2.5-inch front drives

Components on the front of server models with 16 and 24 2.5-inch front drives.

1. Pull-out information tab
2. Front I/O assembly
3. Rack latch (right)
4. Drive bays
5. Rack latch (left)
6. VGA connector (available on some models)
7. Drive activity LED
8. Drive status LED



Note: The chassis for 16 2.5-inch-drive bays cannot be upgraded to the chassis for 24 2.5-inch-drive bays.

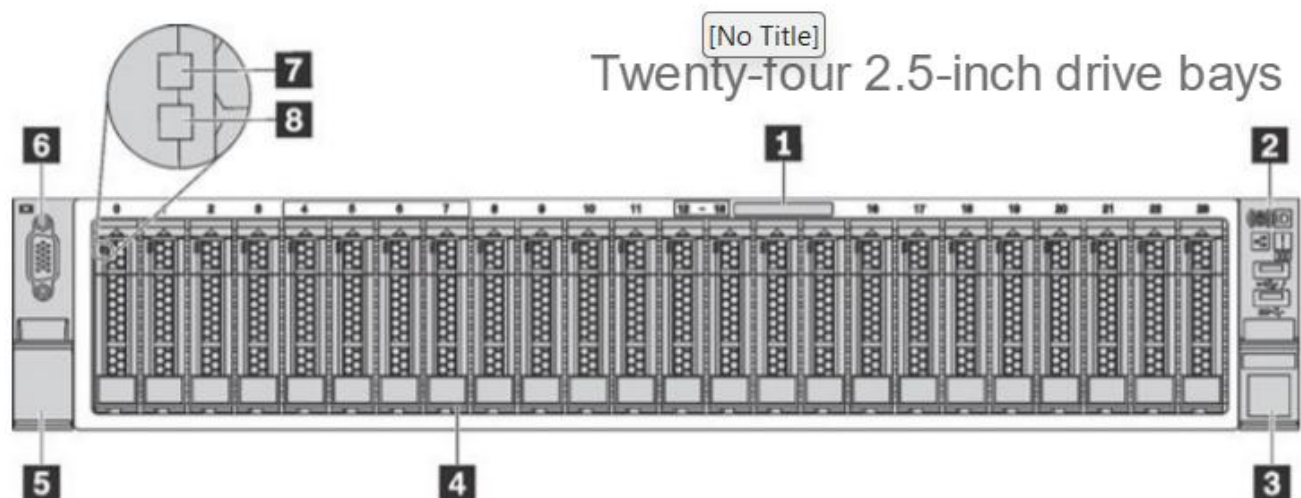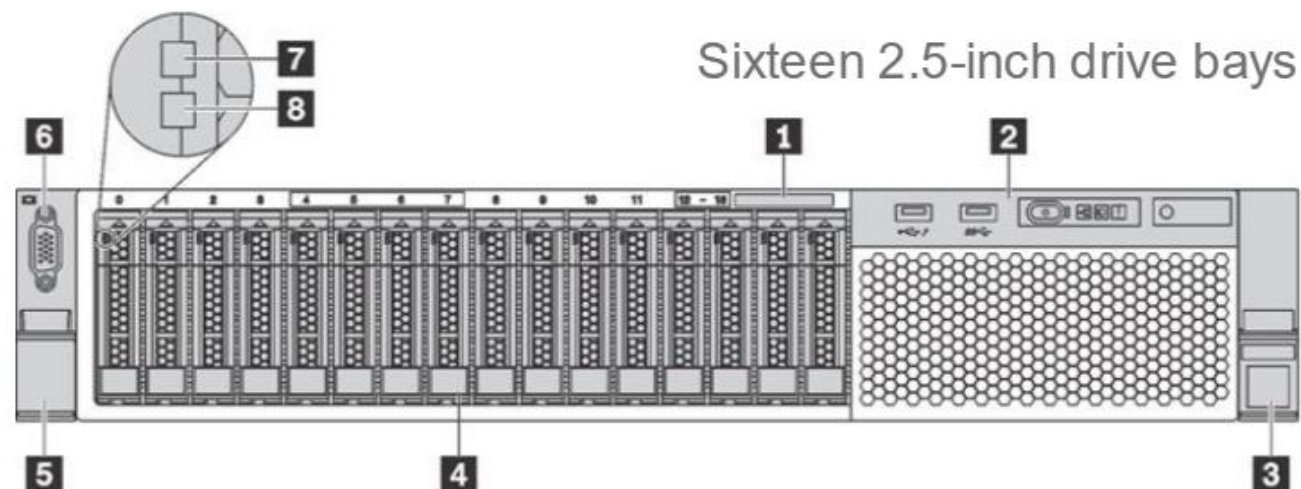


Front view of server models with 3.5-inch drive bays

Components on the front of server models with 3.5-inch drives.

1. Pull-out information tab
2. Front I/O assembly
3. Rack latch (right)
4. Drive bays
5. Rack latch (left)
6. VGA connector (available on some models)
7. Drive activity LED
8. Drive status LED

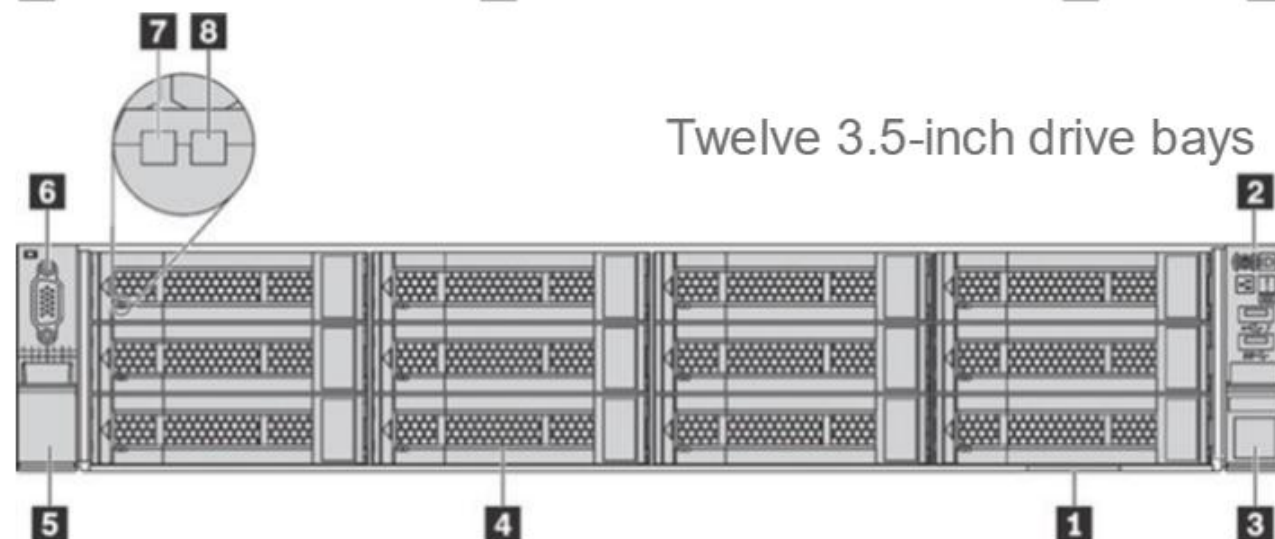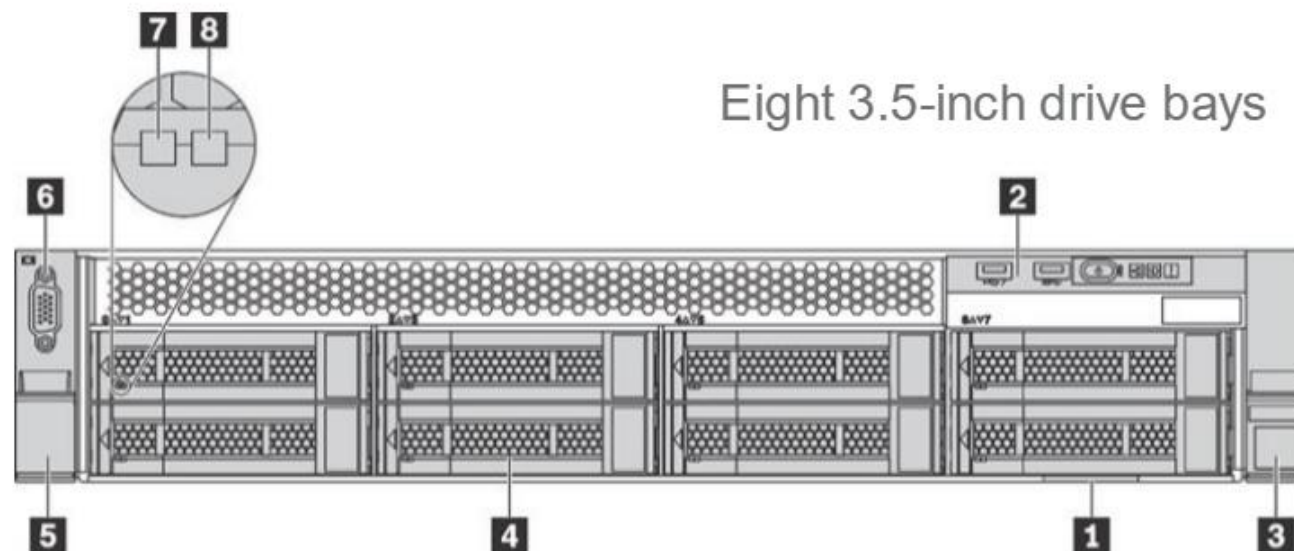

Front view – LEDs, buttons, and ports

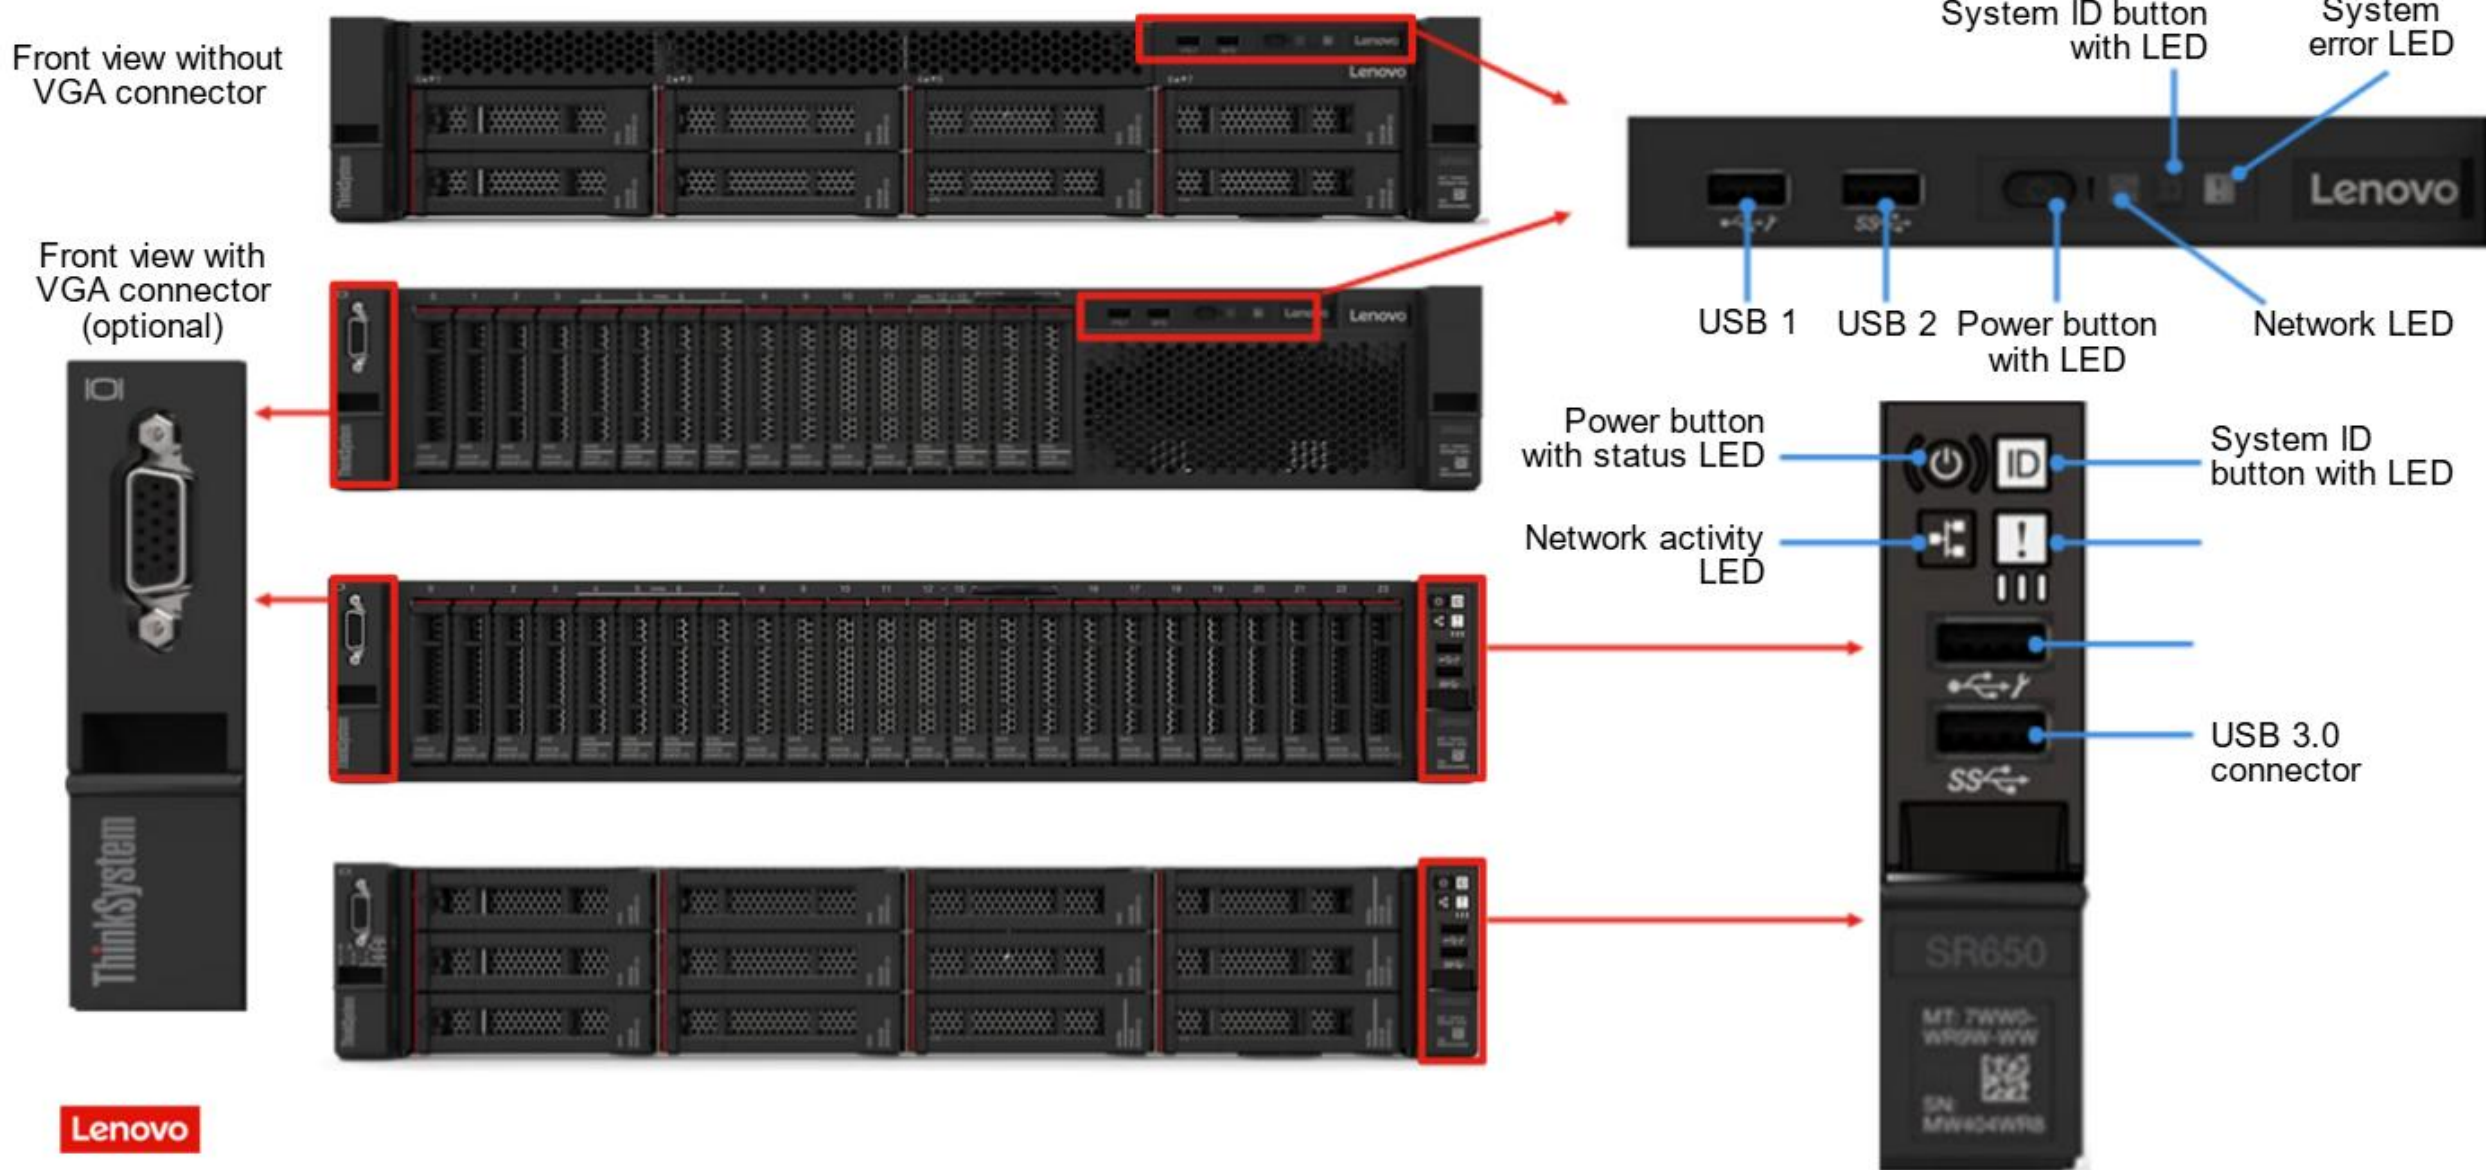


Rear view – LEDs

LEDs on the rear of the server.


1. System ID LED
2. Ethernet link LED
3. Ethernet activity LED
4. System error LED
5. Power input LED
6. Power output LED
7. Power supply error LED




View with rear HDD kit installed; only available with 12 3.5-inch chassis.

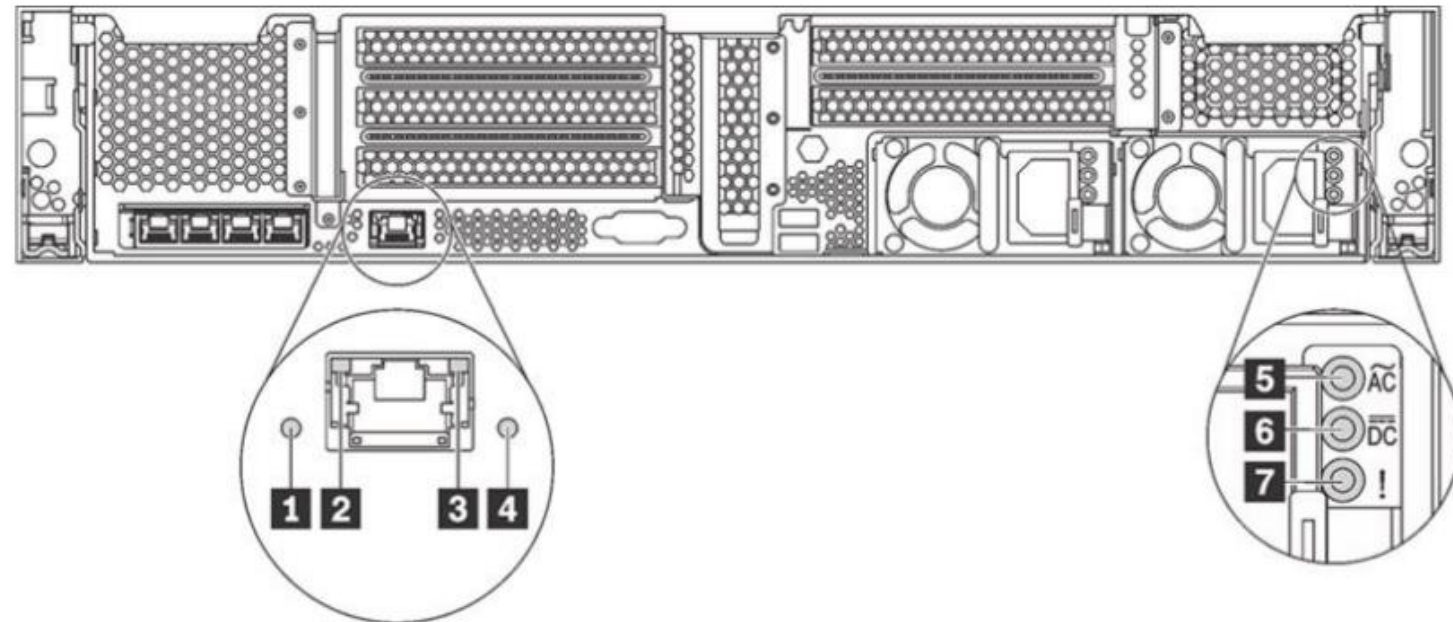


Rear view

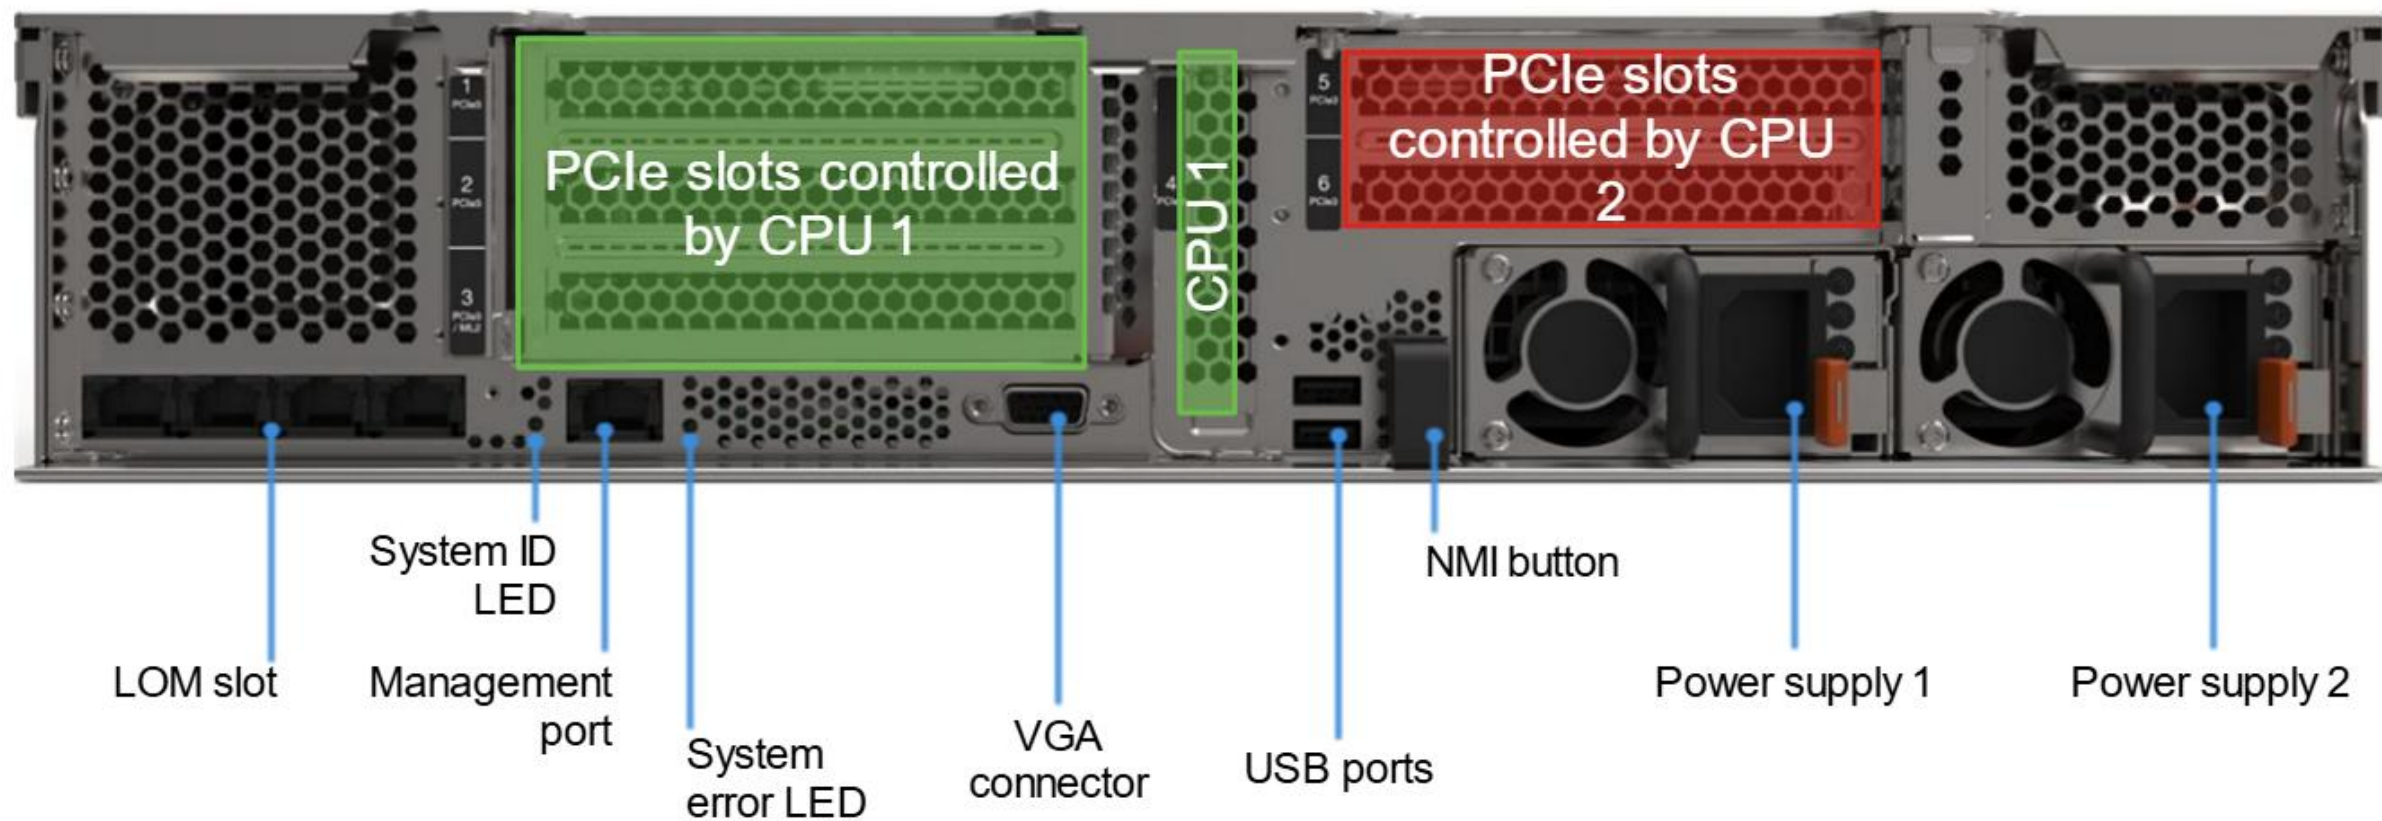

Inside view

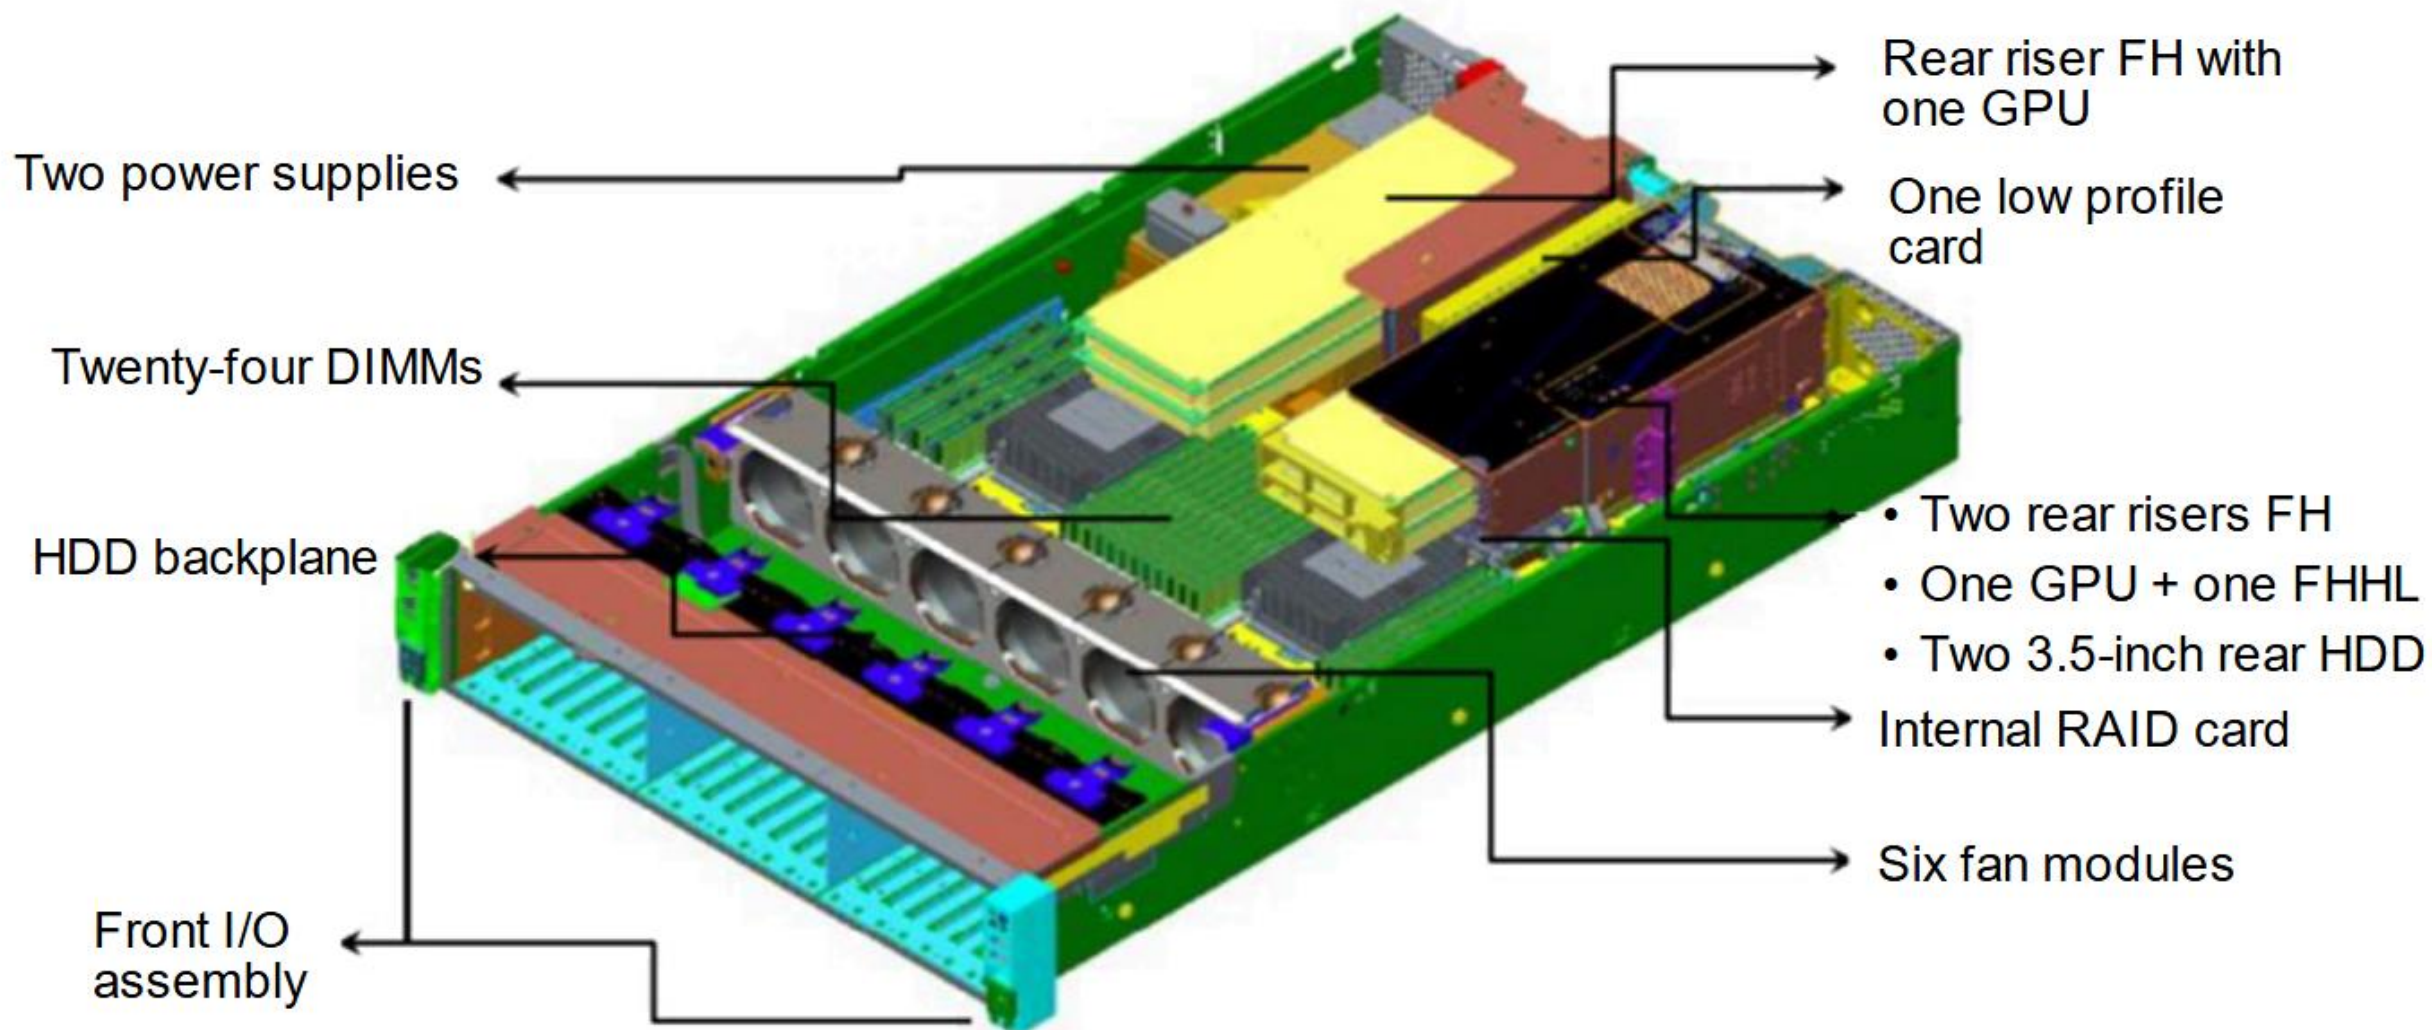


Lenovo ThinkSystem SR650 components

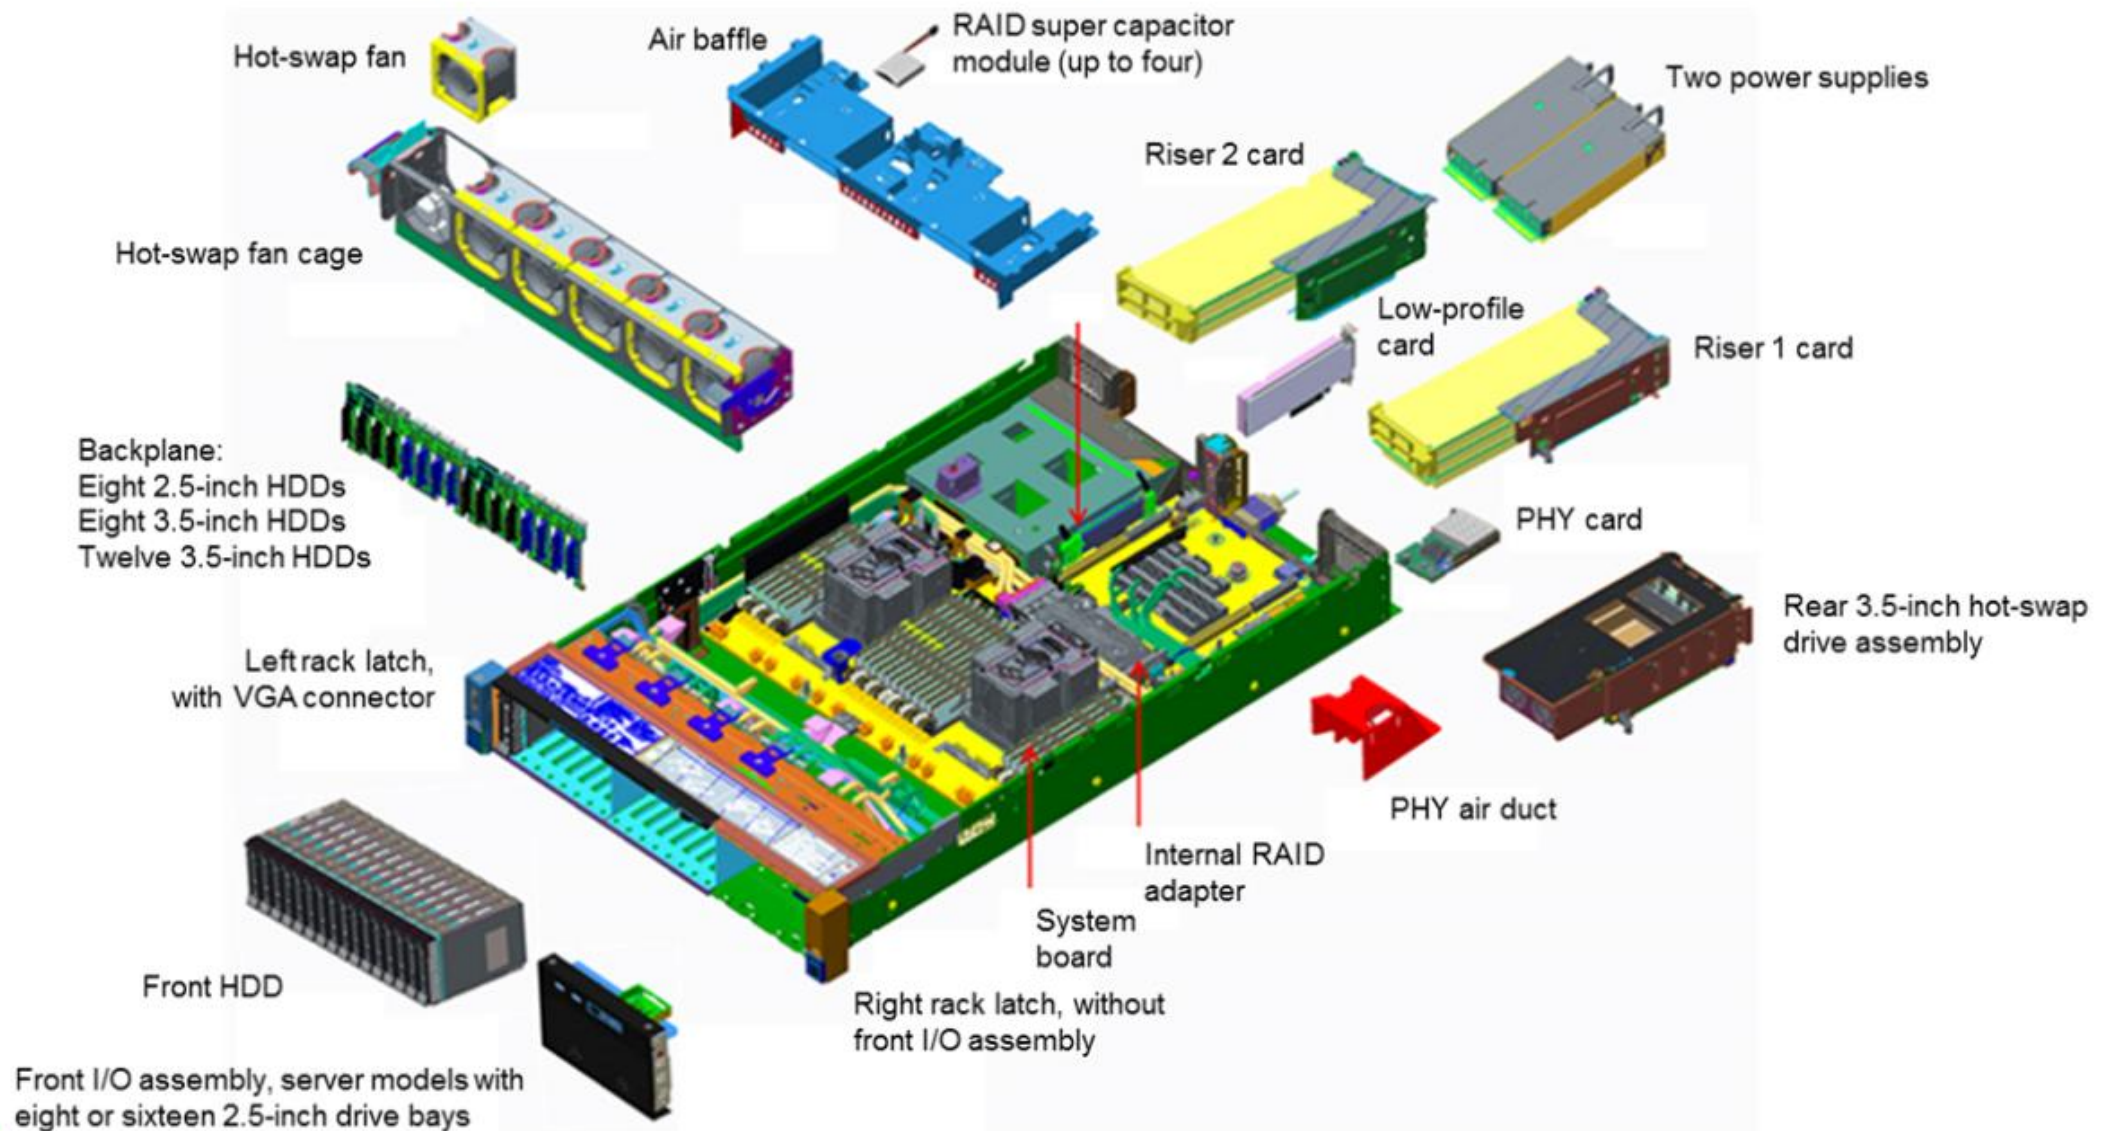

System board jumpers

1. Clear CMOS jumper (J95)
2. Override power-on password jumper (J50)
3. TPM/TCM physical presence jumper (J46)
TPM: Trusted Platform Module
TCM: Trusted Cryptography Module
(for China only)
4. Force XCC update jumper (J45)
5. Force XCC reset jumper (J181)

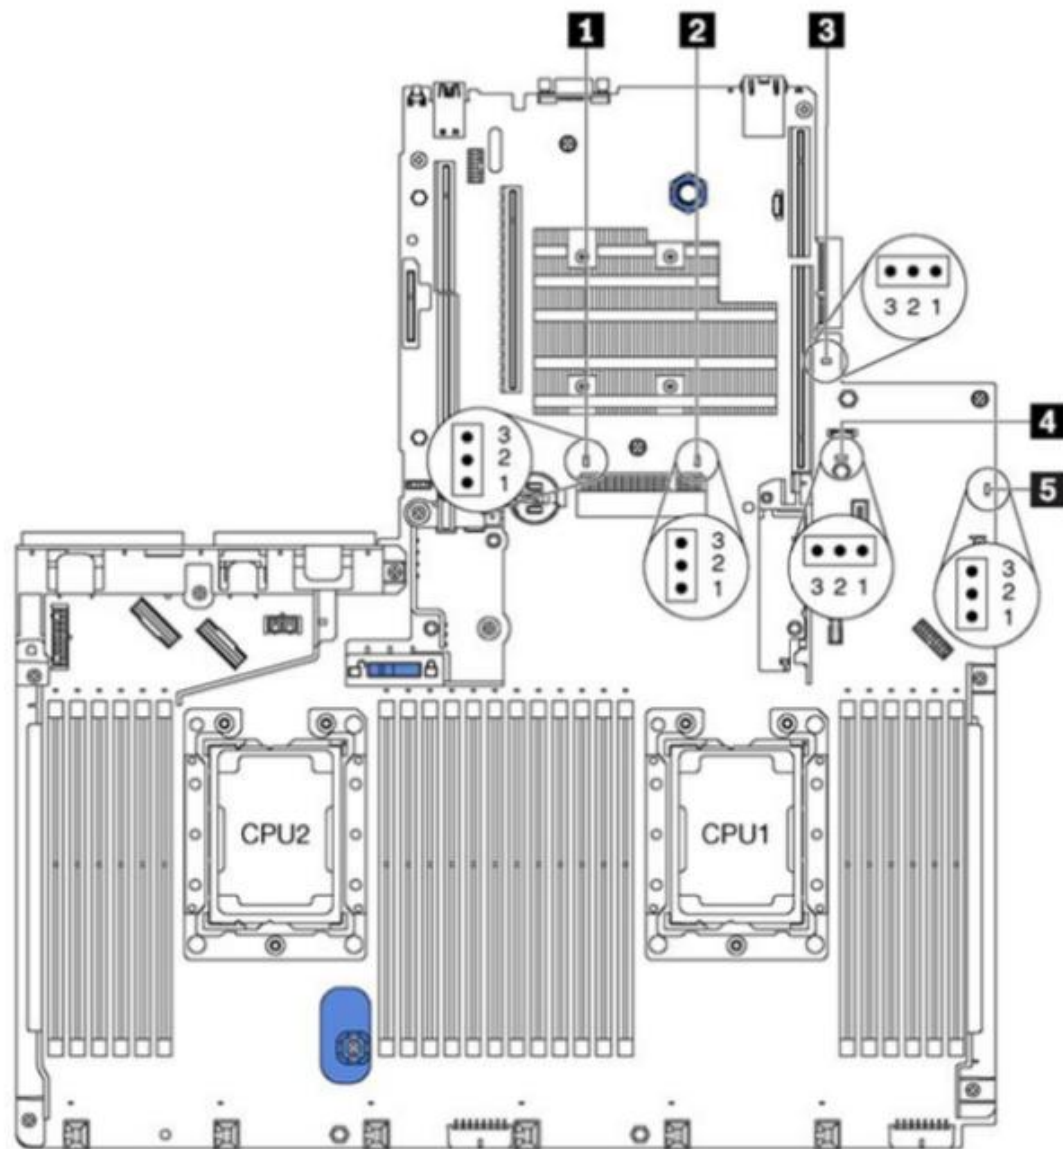

System board components

- | | |
|--|--|
| 1 Riser 2 slot | 16 System fan 1 connector |
| 2 Serial-port-module connector | 17 Processor 1 socket |
| 3 PCIe slot 4 | 18 System fan 2 connector |
| 4 RAID adapter slot | 19 System fan 3 connector |
| 5 BIOS ROM programming connector | 20 Backplane power connector 2 |
| 6 Riser 1 slot | 21 System fan 4 connector |
| 7 LOM adapter connector | 22 Processor 2 socket |
| 8 XCC ROM programming connector | 23 System fan 5 connector |
| 9 Front USB connector | 24 System fan 6 connector |
| 10 GPU power connector 2 | 25 Backplane power connector 1 |
| 11 Operator-information-panel connector | 26 NVMe 2–3 connector |
| 12 TCM connector
(for China only) | 27 NVMe 0–1 connector |
| 13 Front VGA connector | 28 GPU power connector 1 |
| 14 DIMM slots (24) | 29 CMOS battery |
| 15 Backplane power connector 3 | 30 M.2 module slot
(SATA/ PCIe slot 8) |

